 


Kit 1308

 
 
LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03

LEXUS ES 330, 4-dr Sedan, *04-06


*North America

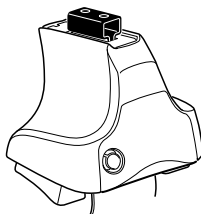

754 Rapid System
480R Rapid Traverse (North America)

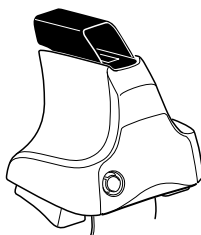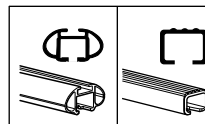

480 Traverse (North America)

 

THULE[®]
SWEDEN

ISO 11154-E

The diagram illustrates the importance of instructions. It features two boxes: one labeled 'THULE' with a warning symbol and a plus sign, and another labeled 'instructions' with a warning symbol and the text 'Kit XXXX'. A person is shown reading the instructions.

754 Rapid System

480R Rapid Traverse (North America)

 
754 Rapid System

480R Rapid Traverse (North America)

480 Rapid Traverse (North America)

480 Rapid Traverse (North America)


480 Rapid Traverse (North America)

Europe		North America	
  x2	 x2 23 mm  x2  x4  x4	 x1 17 mm  x2 23 mm  x2  x4	(North America)  x2 23 mm  x2  x2






520	x 4
-----	-----

 

93	x 4
----	-----


x 1


 
1

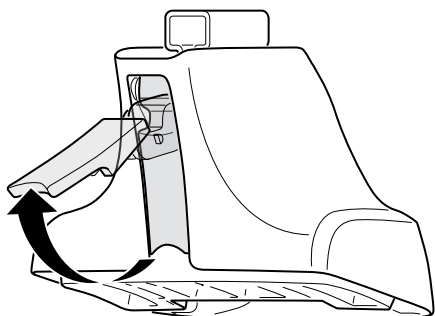



2



 
 
754 Rapid System
480R Rapid Traverse
(North America)

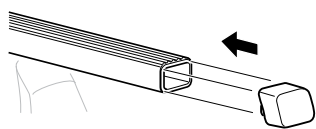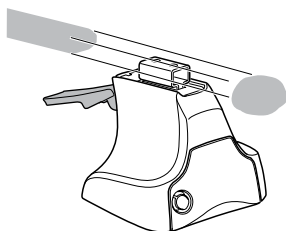

x4

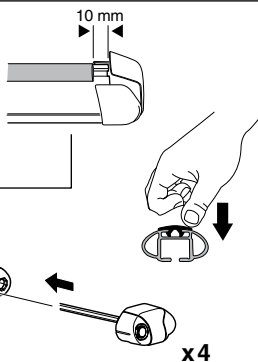  



x4

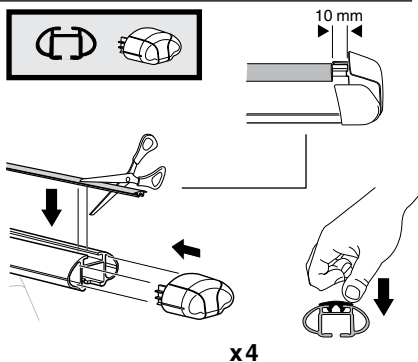  

x4




  480 Traverse
(North America)

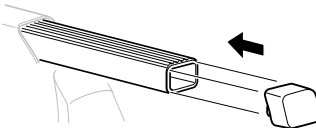
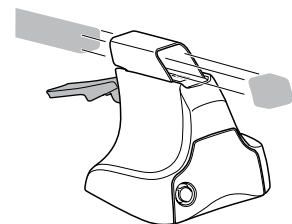


x4

 3



754 Rapid System

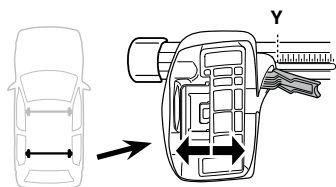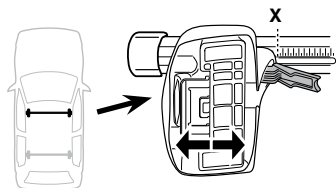  

X

LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03	35,5
LEXUS ES 330, 4-dr Sedan, *04-06	35,5

Y

LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03	36,5
LEXUS ES 330, 4-dr Sedan, *04-06	36,5

3



 
 
480R Rapid Traverse



480 Traverse



(North America)

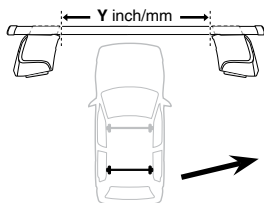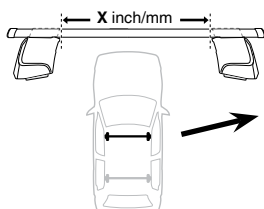

X inch

X mm


LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03	39 ⁵/₈ "	1006 mm
LEXUS ES 330, 4-dr Sedan, *04-06	39 ⁵/₈ "	1006 mm

Y inch

Y mm

LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03	40 "	1016 mm
LEXUS ES 330, 4-dr Sedan, *04-06	40 "	1016 mm


 
4

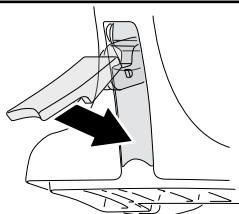



5

LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03


 
 
LEXUS ES 330, 4-dr Sedan, *04-06

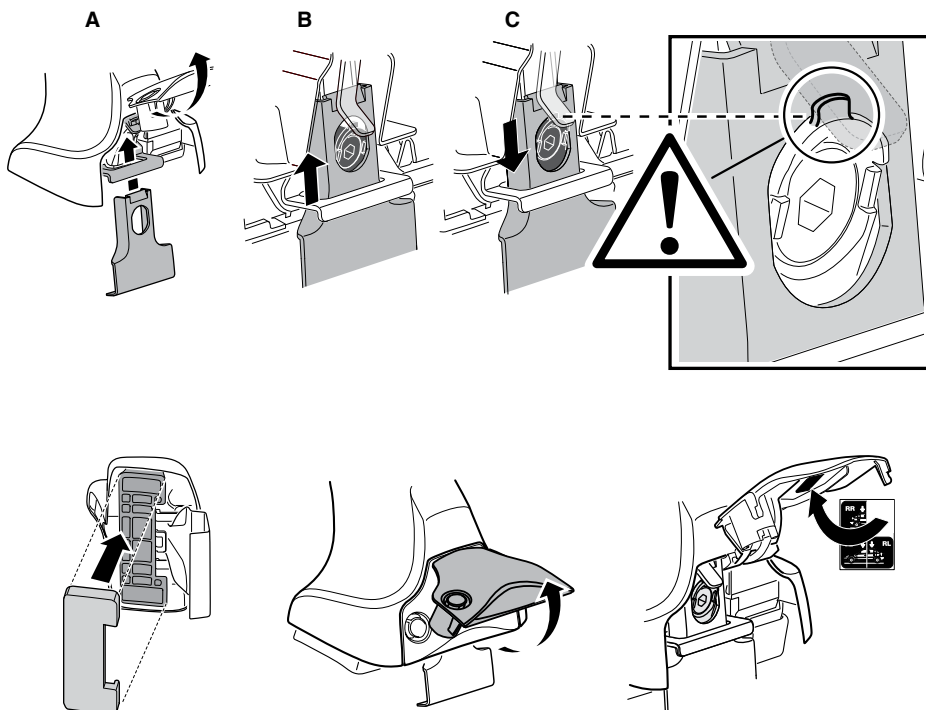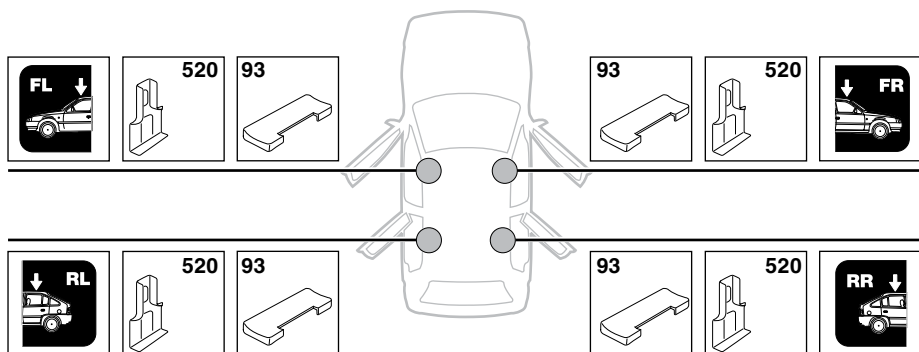


6

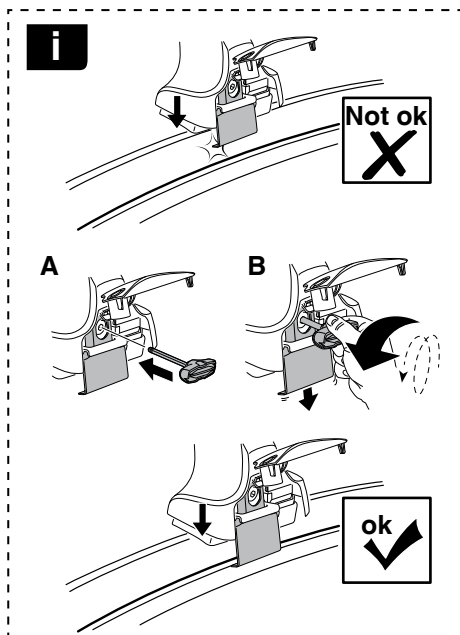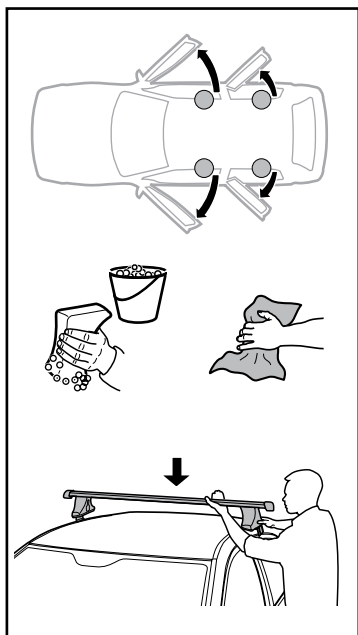  

	X mm	Y mm	X inch	Y inch
LEXUS ES 300, 4-dr Sedan, 02-06 / *02-03	230 mm	670 mm	9 "	26 ³ / ₈ "
LEXUS ES 330, 4-dr Sedan, *04-06	230 mm	670 mm	9 "	26 ³ / ₈ "


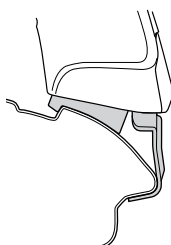 
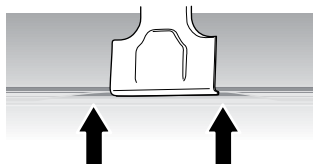 
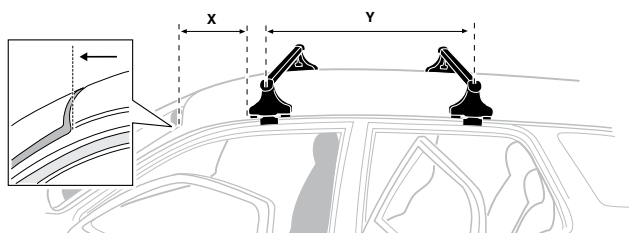 


7


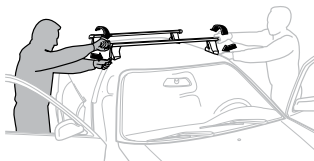 


GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pieļieciet pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

    CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenočno zategnite
HU Egyarástól fűggetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชันในแบบสลับ

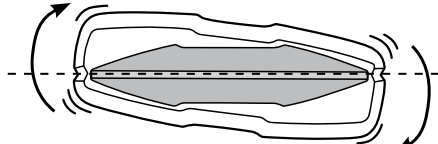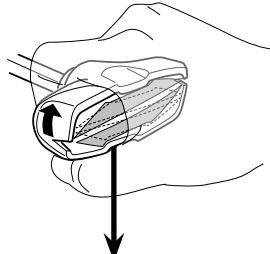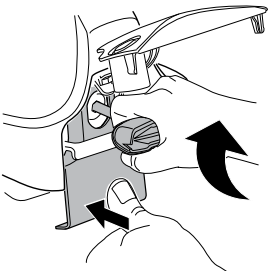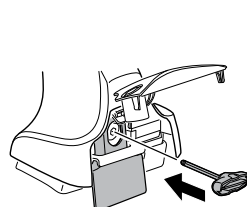



≈ 3 Nm

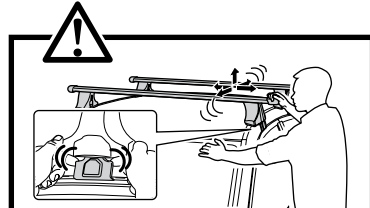 
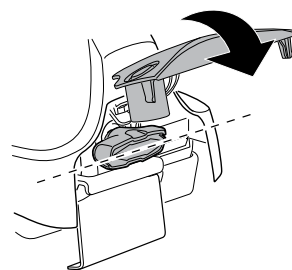 


8



    x1
17 mm

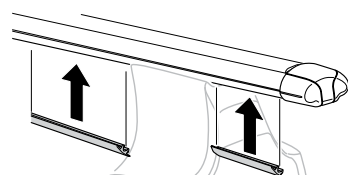

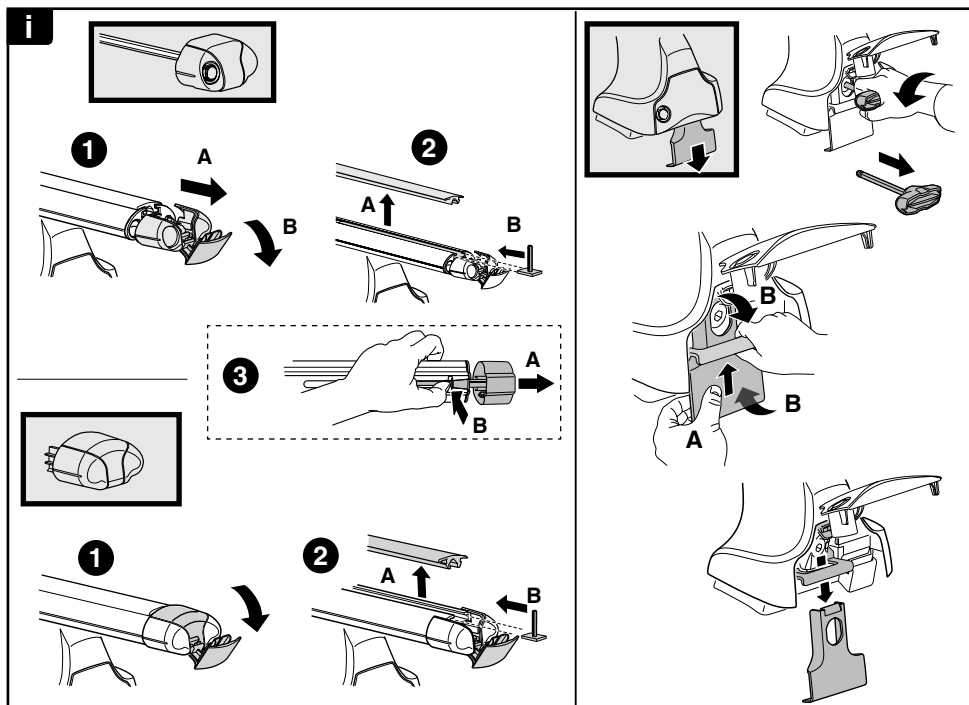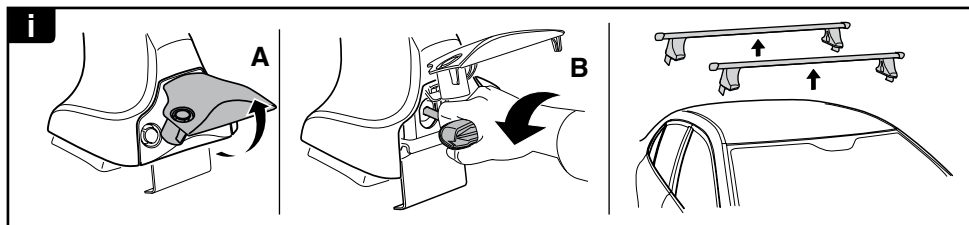

THULE
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		