


## SKYRISE HD ROOFTOP TENT GUIDELINES & BEST PRACTICES

- 1. Vehicle AND roof rack system must have a minimum of 75kg load carrying capacity.
- 2. DO NOT use SkyRise with any clamp-type roof rack fits, unless specified by Yakima.
- 3. Important roof bar notes:
  - (a) Not recommended for use with Whispbar and Prorack aero (e.g S-Wing) crossbars. Installation is technically too difficult given this bar's width in comparison to the SpinVice<sup>™</sup> mounting system's jaws at full extension. We highly recommend switching to Whispbar or Prorack HD bars in this instance.
  - (b) Suitable for use with square bars up to 32x32mm, and rectangular bars up to 32x76mm
- 4. Use of the SkyRise tent on other brands of roof racks, or factory supplied roof racks, is at your own risk. Please contact your roof rack manufacturer for their recommendation on carrying roof top tents.
- 5. DO NOT use SkyRise if your vehicle's roof deforms or dents when heavy loads are applied.
- 6. For vehicles with raised rails, crossbars must be positioned as close as possible to the side or centre rail supports.
- 7. DO NOT install SkyRise on weak raised side rails of the "unsupported" type

X NOT OK	<b></b> ∕ок	<b>Л</b> ок
Unsupported	Center Supported	Side Supported

- 8. Vehicle's crossbar spread (M4) must be between 66cm and 103cm when mounting the tent to open to the side of the vehicle; or between 66cm and 88cm when mounting the tent to open to the rear of the vehicle.
- **9.** The roof rack bars must have a minimum of 66cm between the towers (M1 & M3). If not, there must be at least 10cm of crossbar extending outside the leg, and do not position mounting hardware more than 2.5cm away from the outside of the tower.

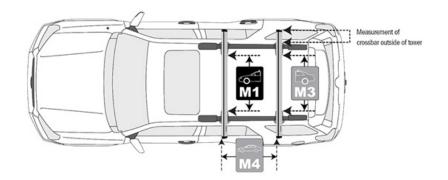

10. The maximum distance from top of crossbar to ground for SkyRise Medium = 249cm